MOSCLEAN AS1

Air Purifier Manual

Model: -

Safety precautions



Failure to follow these instructions may result in major injury or property damage.

- Do not insert fingers or foreign materials such as pins, nails, etc. into the air inlet
- Do not open the filter cover during working.
- Do not open, repair, or alter the product or adaptor arbitrarily.
- Do not use the product in high humid area, and do not touch the adaptor (or power plug) with wet hands.
- Do not use the product in where there are combustible gas or flammable materials.
- Do not spray the product with combustible materials such as pesticide.
- Do not plug multiple appliances into one power outlet at the same time; use a dedicated outlet.
- Use the specified adaptor and do not use a damaged adaptor or a damaged plug. - Make sure the adaptor is plugged into 100-240VAC 50/60Hz power supply outlet only.
- Disconnect the power cord while the product is not in use.
- Do not use a damaged or a dusty power cord, or a damaged power socket,
- Do not insert foreign materials such as pins, nails, etc. into the product.
- If there are any odd noises, burning odor, or smoke, unplug the power cord immediately.
- Do not use the product and power cord close to any heater.
- Do not attach anything? on the power cord or adaptor.
- If the product is damaged or immersed, be sure to fix it before use.
- Do not immerse the product in water and do not pour water on the product.
- Do not bend the power cord and do not get it damaged.
- Turn off the product first and then unplug the power cord.
- Do not give any strong impact to the product.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Names of parts Air Outlet LED Ð Power Switch -Air inlet AC/ DC Adaptor Slot AC/DC adaptor User manual

Product Specification

| Product Name | MOSCLEAN AS1 |
|-------------------------------|-----------------------|
| Model Name | CPASV1GW |
| Product Dimension | 70x70x175mm |
| Product Weight | 385g |
| Rated Output Voltage | DC12V |
| Power Consumption | 4W |
| Filter Cleaning Cycle - | pre filter 3month |
| | violeds filter 6month |
| Class of insulation materials | Class III devices |

How to install

- Keep the product in a stable position.
- Be sure that the adaptor included is inserted into DC adaptor slot backside of the product and then plugged into the power supply outlet.
- If you press the Start/Stop button, the product starts.
- If you press the Start/Stop button during working, the product stops.


How to clean

- Disconnect the power cord prior to cleaning or exchanging a filter.

 Never spray water directly to clean or wipe the product with detergent containing organic solvents (thinners, etc.), bleach, chlorine, and abrasives.


 Clean Pre-filter and violeds filter periodically.

 To clean the body of the product, Wipe with a soft, dry cloth.

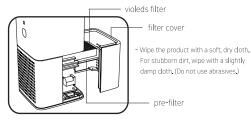

• How to clean the pre-filter/violeds filter

 Separate the adaptor from the product and then loosen the screw at the bottom of the product.



3 Separate Pre-filter and violeds filter from the product Separate Pre-filter and



How to clean

How to clean the pre-filter 4 How to creation in cleaning period / 3month







Remove the dust or clean the pre-filter with water and dry it before using the product.

5 How to recycle violeds filter







After immersing the violeds filter in boiling water for 20 to 30 minutes, wipe the water off and dry completely using paper towel or dryer before using the product.

Insert the cleaned pre-filter and violeds filter into the product and assemble in reverse order.

WARRANTY

- If product fails to operate in the way specified in the manual, during one (1) year warranty
- period after purchasing the product, then free-repair or free-replacement shall be provided, at the discretion of the manufacturer.
- If the product fails to operate due to negligence or fault of the customer, then repair or replacement may be provided for a fee.
- Please keep this warranty card and all related documents in a safe place. these are your only copies and they shall not be reissued.

CPASV1GW Model Name Distributor(Dealer) Date of purchase Customer Name Telephone No. Customer Address Note