



# BC66-NA-TE-B

## User Guide

**NB-IoT Module Series**

Rev. BC66-NA-TE-B\_User\_Guide\_V1.0

Date: 2019-11-05

Status: Released

**Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:**

**Quectel Wireless Solutions Co., Ltd.**

Building 5, Shanghai Business Park Phase III (Area B), No.1016 Tianlin Road, Minhang District, Shanghai, China 200233

Tel: +86 21 5108 6236

Email: [info@quectel.com](mailto:info@quectel.com)

**Or our local office. For more information, please visit:**

<http://www.quectel.com/support/sales.htm>

**For technical support, or to report documentation errors, please visit:**

<http://www.quectel.com/support/technical.htm>

Or email to: [support@quectel.com](mailto:support@quectel.com)

**GENERAL NOTES**

QUECTEL OFFERS THE INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

**COPYRIGHT**

THE INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL WIRELESS SOLUTIONS CO., LTD. TRANSMITTING, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THE CONTENT ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

**Copyright © Quectel Wireless Solutions Co., Ltd. 2019. All rights reserved.**

# About the Document

## History

Revision	Date	Author	Description
1.0	2019-11-05	Speed SUN	Initial

## Contents

<b>About the Document .....</b>	<b>2</b>
<b>Contents .....</b>	<b>3</b>
<b>Table Index .....</b>	<b>4</b>
<b>Figure Index .....</b>	<b>5</b>
<b>1    Introduction .....</b>	<b>6</b>
1.1.    Safety Information .....	6
<b>2    Product Concept .....</b>	<b>8</b>
2.1.    Key Features.....	8
2.2.    Functional Diagram.....	10
2.3.    Interface Distribution Diagram .....	10
2.4.    Arduino Interface Definition.....	12
<b>3    Operation Procedures .....</b>	<b>14</b>
3.1.    Operation Procedure with Single Board .....	14
3.1.1.    Interface Diagram of Using BC66-NA-TE-B Alone .....	15
3.1.2.    Operation Procedures of Using BC66-NA-TE-B Alone .....	16
3.2.    Operation Procedure with Multi Boards .....	16
3.2.1.    Interface Diagram of Using Multi Boards .....	17
3.2.2.    Operation Procedures of Using Multi Boards .....	19
3.2.3.    Description of Pin Connection.....	19
<b>4    Electrical and Reliability Characteristics .....</b>	<b>21</b>
4.1.    Absolute Maximum Ratings .....	21
4.2.    Operation and Storage Temperatures.....	21
<b>5    Mechanical Dimensions .....</b>	<b>23</b>
5.1.    Mechanical Dimensions of BC66-NA-TE-B .....	23
5.2.    Top/Bottom View of BC66-NA-TE-B .....	24
<b>6    BC66-NA-TE-B Kit and Accessories .....</b>	<b>25</b>
6.1.    BC66-NA-TE-B Kit .....	25
6.2.    BC66-NA-TE-B Kit Accessories.....	26
<b>7    Appendix A References.....</b>	<b>27</b>

## Table Index

TABLE 1: KEY FEATURES OF BC66-NA-TE-B.....	8
TABLE 2: INTERFACES OF BC66-NA-TE-B.....	12
TABLE 3: PIN CONNECTION BETWEEN BC66-NA-TE-B AND STM32-L476RG MCU .....	19
TABLE 4: ABSOLUTE MAXIMUM RATINGS .....	21
TABLE 5: OPERATION AND STORAGE TEMPERATURES OF BC66-NA MODULE .....	21
TABLE 6: ACCESSORIES LIST .....	26
TABLE 7: RELATED DOCUMENT .....	27
TABLE 8: TERMS AND ABBREVIATIONS .....	27

## Figure Index

FIGURE 1: FUNCTIONAL DIAGRAM OF BC66-NA-TE-B .....	10
FIGURE 2: INTERFACE DISTRIBUTION DIAGRAM OF BC66-NA-TE-B.....	11
FIGURE 3: ARDUINO INTERFACE DEFINITION .....	13
FIGURE 4: INTERFACE DIAGRAM OF USING BC66-NA-TE-B ALONE.....	15
FIGURE 5: UART PORTS DISPLAYED ON PC.....	16
FIGURE 6: INTERFACE DIAGRAM OF USING MULTI BOARDS.....	17
FIGURE 7: STM32 NUCLEO-64 BOARD INTERFACE DIAGRAM (TOP VIEW) .....	18
FIGURE 8: STM32 NUCLEO-64 BOARD MODIFICATION DIAGRAM (BOTTOM VIEW) .....	18
FIGURE 9: ST-LINK INTERFACE DISPLAYED ON PC.....	19
FIGURE 10: PIN CONNECTION BETWEEN BC66-NA-TE-B AND STM32-L476RG MCU .....	20
FIGURE 11: DIMENSIONS OF BC66-NA-TE-B (TOP VIEW).....	23
FIGURE 12: TOP VIEW OF THE BC66-NA-TE-B.....	24
FIGURE 13: BOTTOM VIEW OF THE BC66-NA-TE-B.....	24
FIGURE 14: BC66-NA-TE-B KIT ASSEMBLY .....	25
FIGURE 15: BC66-NA-TE-B AND THE ACCESSORIES.....	26

# 1 Introduction

In order to facilitate application development with Quectel BC66-NA module, Quectel supplies corresponding development board (BC66-NA-TE-B) to test the module. This document helps customers to quickly understand BC66-NA-TE-B interface specifications, electrical and mechanical details and know how to use it.

## 1.1. Safety Information

The following safety precautions must be observed during all phases of operation, such as usage, service or repair of any cellular terminal or mobile incorporating BC66-NA module. Manufacturers of the cellular terminal should notify users and operating personnel of the following safety information by incorporating these guidelines into all manuals supplied with the product. If not so, Quectel assumes no liability for any user's failure to observe these precautions.



Full attention must be paid to driving at all times in order to reduce the risk of an accident. Using a mobile while driving (even with a handsfree kit) causes distraction and can lead to an accident. Please comply with laws and regulations restricting the use of wireless devices while driving.



Switch off the cellular terminal or mobile before boarding an aircraft. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communication systems. If there is an Airplane Mode, it should be enabled prior to boarding an aircraft. Please consult the airline staff for more restrictions on the use of wireless devices on an aircraft.



Wireless devices may cause interference on sensitive medical equipment, so please be aware of the restrictions on the use of wireless devices when in hospitals, clinics or other healthcare facilities.



Cellular terminals or mobiles operating over radio signals and cellular network cannot be guaranteed to connect in all possible conditions (for example, with unpaid bills or with an invalid (U)SIM card). When emergent help is needed in such conditions, please remember using emergency call. In order to make or receive a call, the cellular terminal or mobile must be switched on in a service area with adequate cellular signal strength.



The cellular terminal or mobile contains a transmitter and receiver. When it is ON, it receives and transmits radio frequency signals. RF interference can occur if it is used close to TV set, radio, computer or other electric equipment.



In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as mobile phone or other cellular terminals. Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust or metal powders, etc.

# 2 Product Concept

BC66-NA-TE-B is a NB-IoT development board which supports Arduino interface. Designed in 70.0mm × 74.0mm form factor, BC66-NA-TE-B can be used either alone or in conjunction with STM32 Nucleo-64 development board, to develop and debug applications which communicate with infrastructures of mobile network operators through NB-IoT radio protocols in 3GPP Rel. 14.

## 2.1. Key Features

The following table describes the detailed features of BC66-NA-TE-B.

**Table 1: Key Features of BC66-NA-TE-B**

Feature	Details
Power Supply	<p><b>USB interface:</b>            Supply voltage range: 4.75V~5.25V            Typical supply voltage: 5.0V</p> <p><b>Arduino interface:</b>            Supply voltage range: 4.75V~5.25V            Typical supply voltage: 5.0V</p> <p><b>External power supply interface:</b>            Supply voltage range: 4.75V~5.25V            Typical supply voltage: 5.0V</p>
Transmitting Power	23dBm±2dB
Temperature Range	<p>Operation temperature range: -35°C ~ +75°C <sup>1)</sup>            Extended temperature range: -40°C ~ +85°C <sup>2)</sup>            Storage temperature range: -40°C ~ +90°C</p>
USIM Interface	Support 1.8V external USIM card
UART Switch	Used to switch the communication object of BC66-NA main UART port
USB Interface	<p>Support three UART ports:  <b>Main UART (Interface0):</b></p> <ul style="list-style-type: none"> <li>● Used for AT command communication and data transmission.</li> <li>● By default, the module is in auto-baud mode, and it supports</li> </ul>

automatic baud rates not exceeding 115200bps. When powering on the module, the MCU has to send **AT** command consecutively to synchronize baud rate with the module. When **OK** is returned, it indicates the baud rate has been synchronized successfully. When the module is woken up from light or deep mode, the baud rate synchronized during start-up will be used directly.

- Also can be used for firmware upgrade, and in such case, the baud rate is 921600bps by default.

#### Auxiliary UART (Interface1):

- Used for firmware debugging
- Default baud rate: 115200bps

#### Debug UART (Interface2):

- Used for firmware debugging
- Default baud rate: 115200bps

#### Reserved UART (Interface3)


Arduino Interface	Used for connection with STM32 Nucleo-64 development board
RESET Button	Used to reset BC66-NA module
PWRKEY Button	Used to turn on BC66-NA module
Physical Characteristics	Size: (70.0±0.15)mm × (74.0±0.15)mm
Firmware Upgrade	Firmware upgrade via main UART port or DFOTA
Antenna Interface	50Ω characteristic impedance

#### NOTES

1. <sup>1)</sup> Within operation temperature range, the module is 3GPP compliant.
2. <sup>2)</sup> Within extended temperature range, the module remains the ability to establish and maintain functions such as SMS\*, data transmission, etc., without any unrecoverable malfunction. Radio spectrum and radio network will not be influenced, while one or more specifications, such as  $P_{out}$ , may exceed the specified tolerances of 3GPP. When the temperature returns to the normal operation temperature levels, the module will meet 3GPP specifications again.
3. “\*\*” means under development.

## 2.2. Functional Diagram

The following figure shows a block diagram of BC66-NA-TE-B.

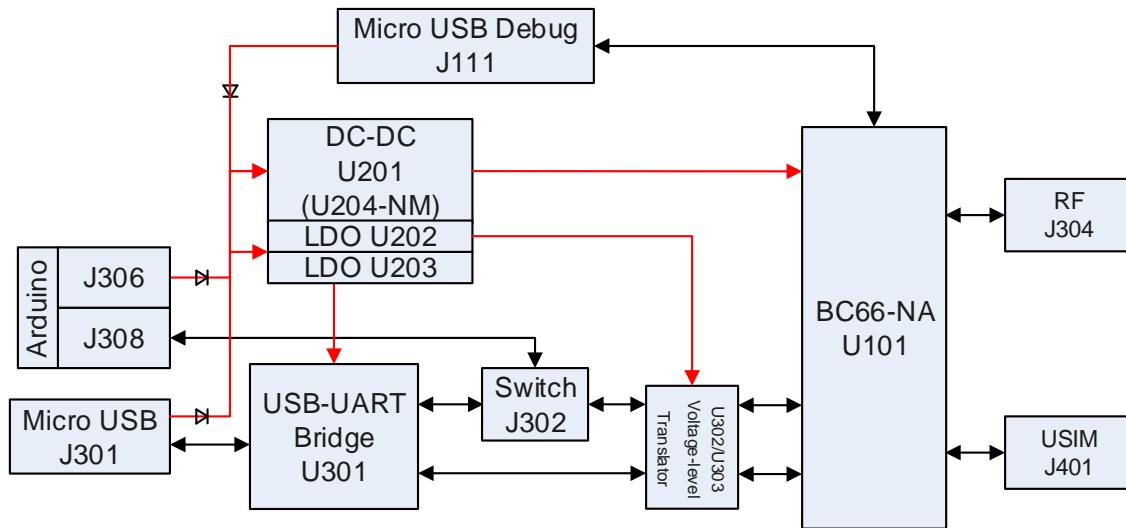

**Figure 1: Functional Diagram of BC66-NA-TE-B**

## 2.3. Interface Distribution Diagram

The following figure shows the interface distribution diagram of BC66-NA-TE-B.

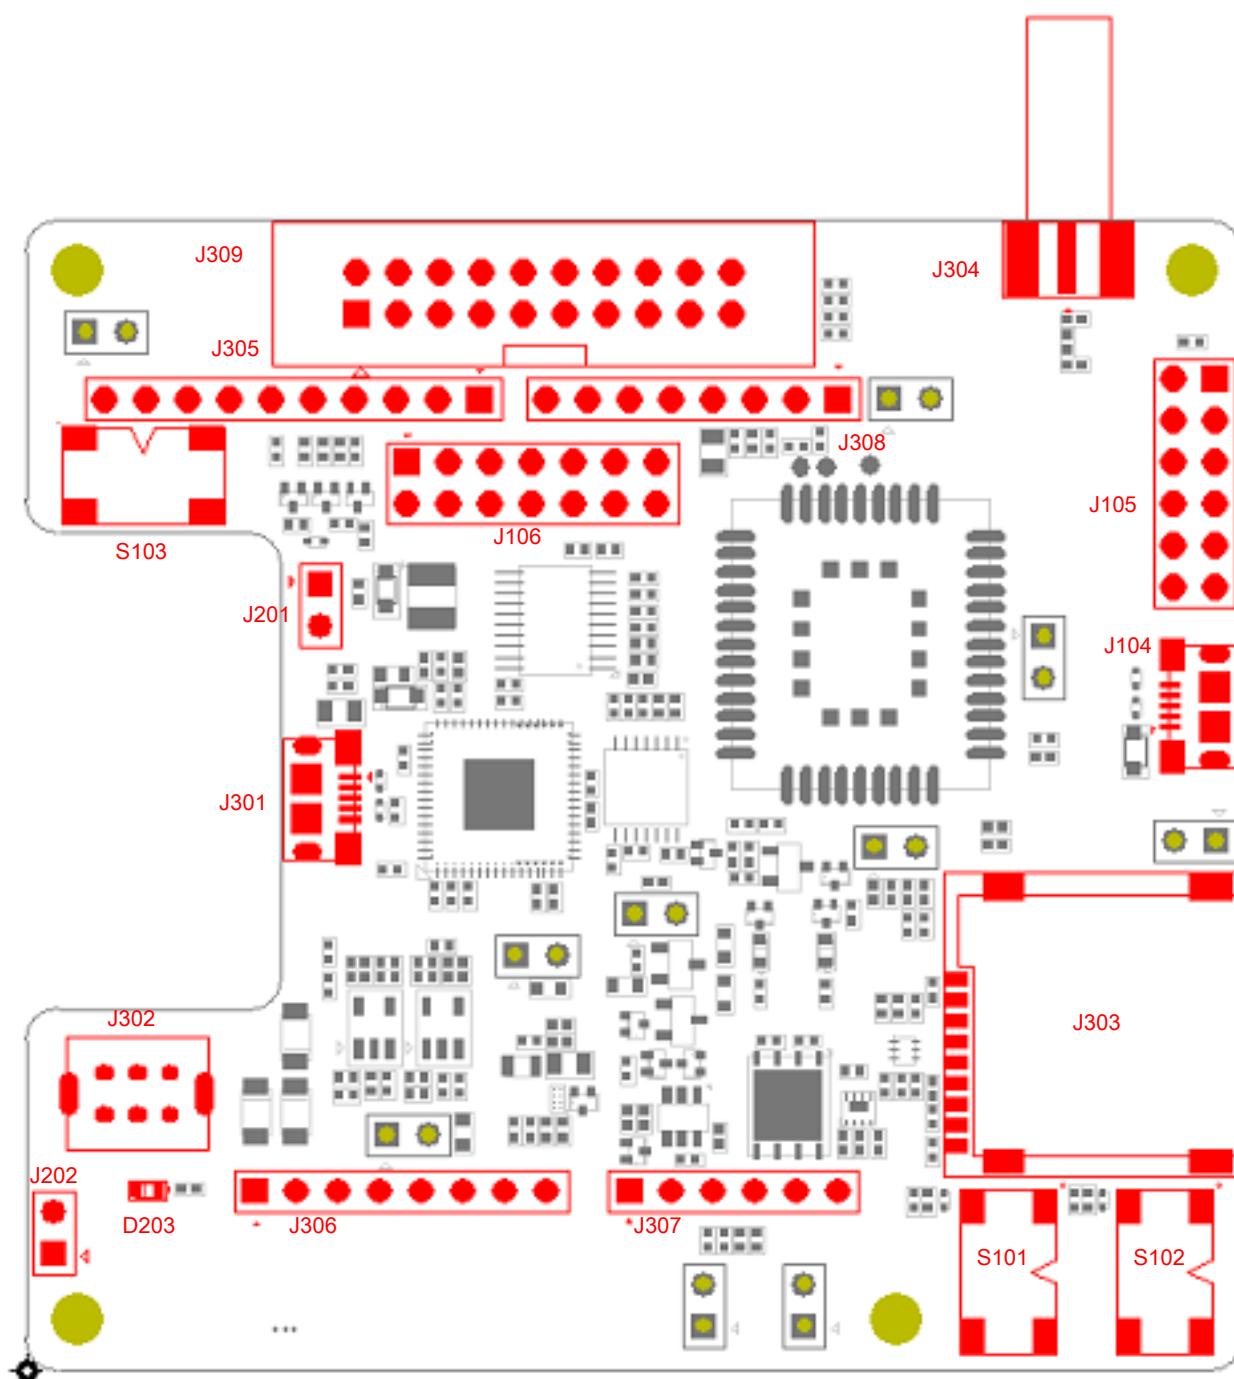


Figure 2: Interface Distribution Diagram of BC66-NA-TE-B

**Table 2: Interfaces of BC66-NA-TE-B**

Interface	Designator	Description
Power Supply Interfaces	J301	USB power supply interface
	J202	External power supply interface
	J306	Arduino power supply interface
USB-UART Interface	J301	Support 3 UART ports: Interface0/1/2
USIM Interface	J303	Micro-SIM card connector
USB Interface	J104	Used to output BC66-NA USB log
Arduino Interfaces	J305, J306, J307, J308	Standard Arduino interfaces
RF Antenna Interface	J304	RF SMA connector
UART Switch	J302	Used to select the communication object of BC66-NA's main UART: "MAIN UART TO USB" or "MAIN UART TO MCU"
PWRKEY Button	S101	Used to turn on BC66-NA module
RESET Button	S102	Used to reset BC66-NA module
Sleep Wakeup Button	S103	Used to wake up BC66-NA from Deep Sleep mode
Power Indicator	D203	Used to indicate the power on/off status
JTAG Interface	J309	Used to debug firmware

## 2.4. Arduino Interface Definition

The following figure shows the Arduino interface definition of BC66-NA-TE-B.

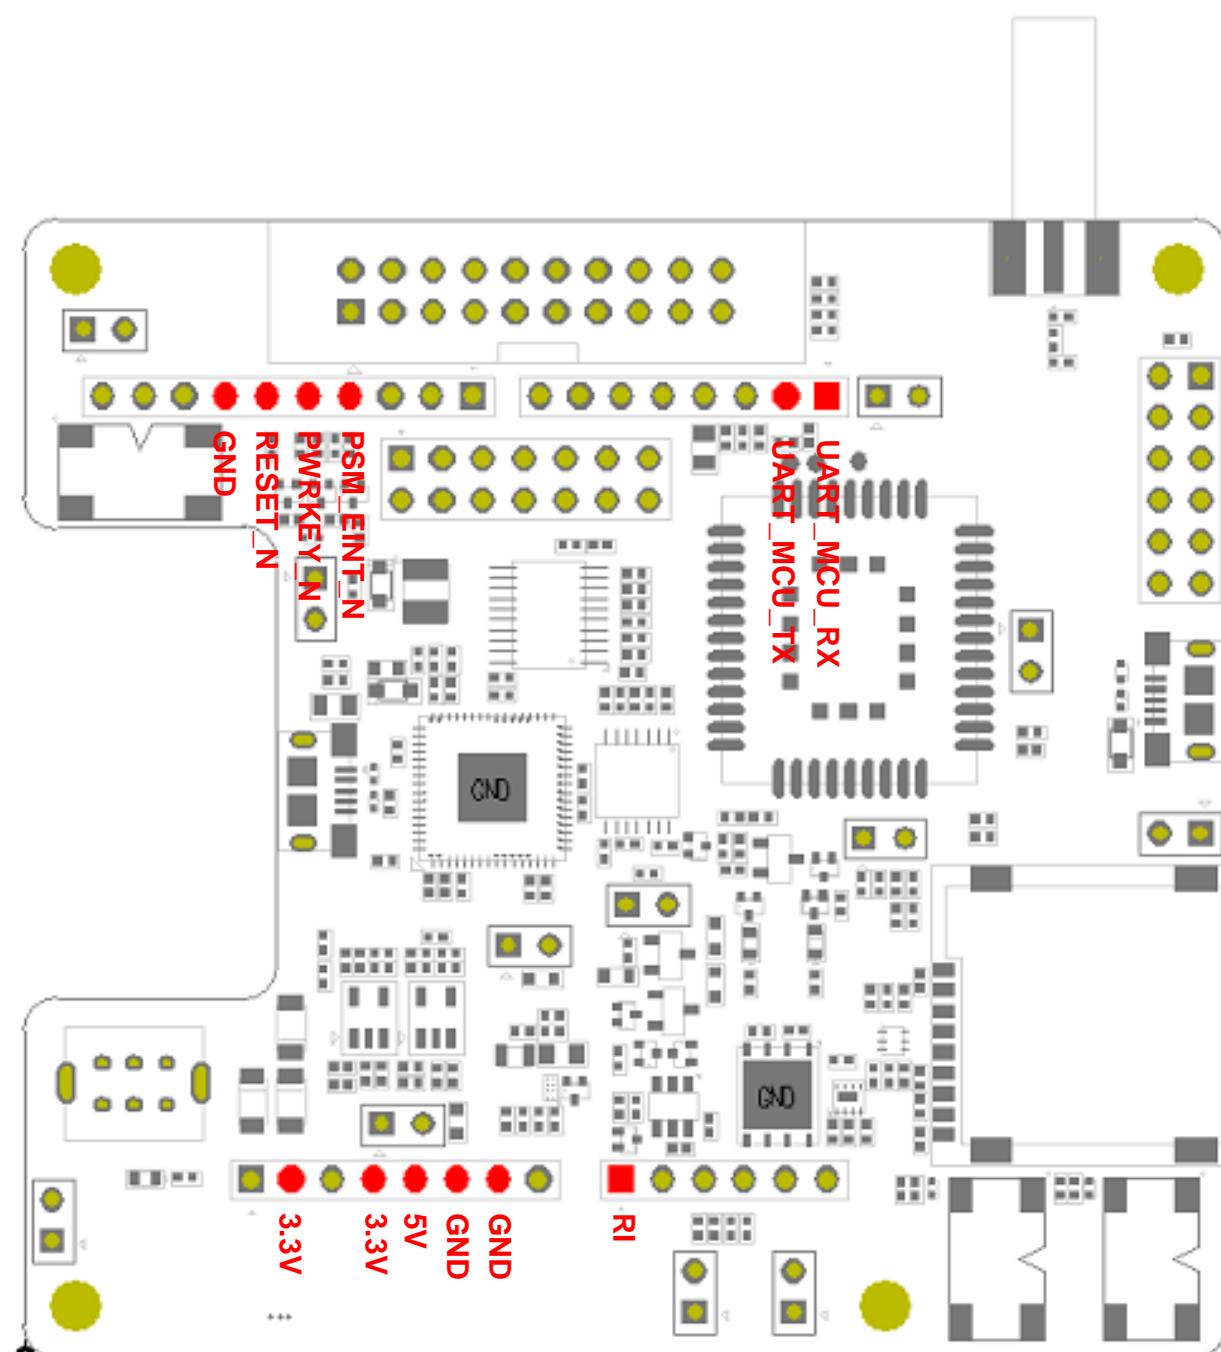


Figure 3: Arduino Interface Definition

# 3 Operation Procedures

This chapter mainly illustrates the operation procedures of BC66-NA-TE-B. BC66-NA-TE-B can be used alone to upgrade firmware and debug applications based on BC66-NA module. Also, it can be used in conjunction with an STM32 Nucleo-64 development board via Arduino interface to develop NB-IoT applications based on STM32. The following describes the operation procedures of BC66-NA-TE-B in different operation modes.

## 3.1. Operation Procedure with Single Board

This chapter elaborates the operation procedure of using the BC66-NA-TE-B alone.

### 3.1.1. Interface Diagram of Using BC66-NA-TE-B Alone

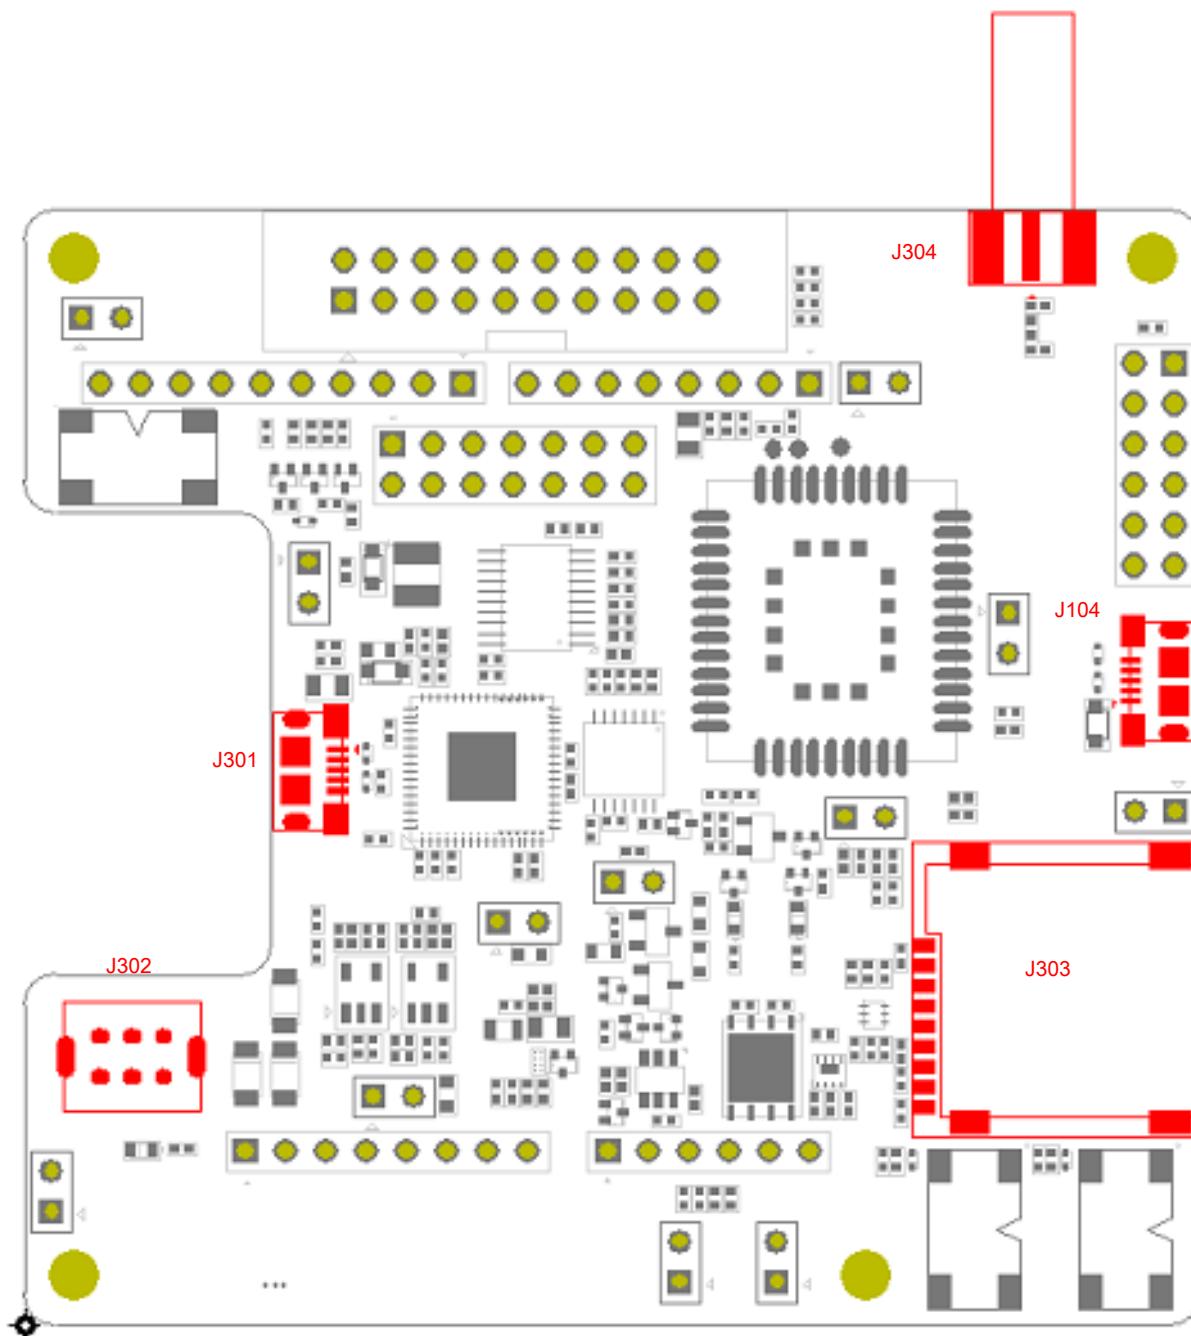


Figure 4: Interface Diagram of Using BC66-NA-TE-B Alone

### 3.1.2. Operation Procedures of Using BC66-NA-TE-B Alone

1. Install USB-UART driver which can be downloaded from the following URL:  
<https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers>.
2. Insert a Micro-SIM card into J303, and please note that a NB-IoT USIM card should be selected.
3. Connect the rod antenna with SMA connector on J304 (RF antenna connector).
4. Switch J302 (UART Switch) to “MAIN UART TO USB” state.
5. Connect the J301 (USB power supply interface) with PC via Micro USB cable. After turning on BC66-NA-TE-B, UART port information will be shown on “Device Manager” of PC. **Interface0** is the main UART port and can be used for AT command communication, data transmission and firmware upgrading. **Interface1/2** are auxiliary UART and debug UART respectively, both of which can be used to output log for firmware debugging. For details of UART configuration, please refer to *Quectel\_BC66-NA\_Hardware\_Design*.



Figure 5: UART Ports Displayed on PC

**NOTE**

In the procedure, S101 can be used to turn on BC66-NA module, S102 can be used to reset the module, and S103 can be used to wake up the module from Deep Sleep.

### 3.2. Operation Procedure with Multi Boards

This chapter elaborates the operation procedure of using the BC66-NA-TE-B in conjunction with an STM32 Nucleo-64 development board.

### 3.2.1. Interface Diagram of Using Multi Boards

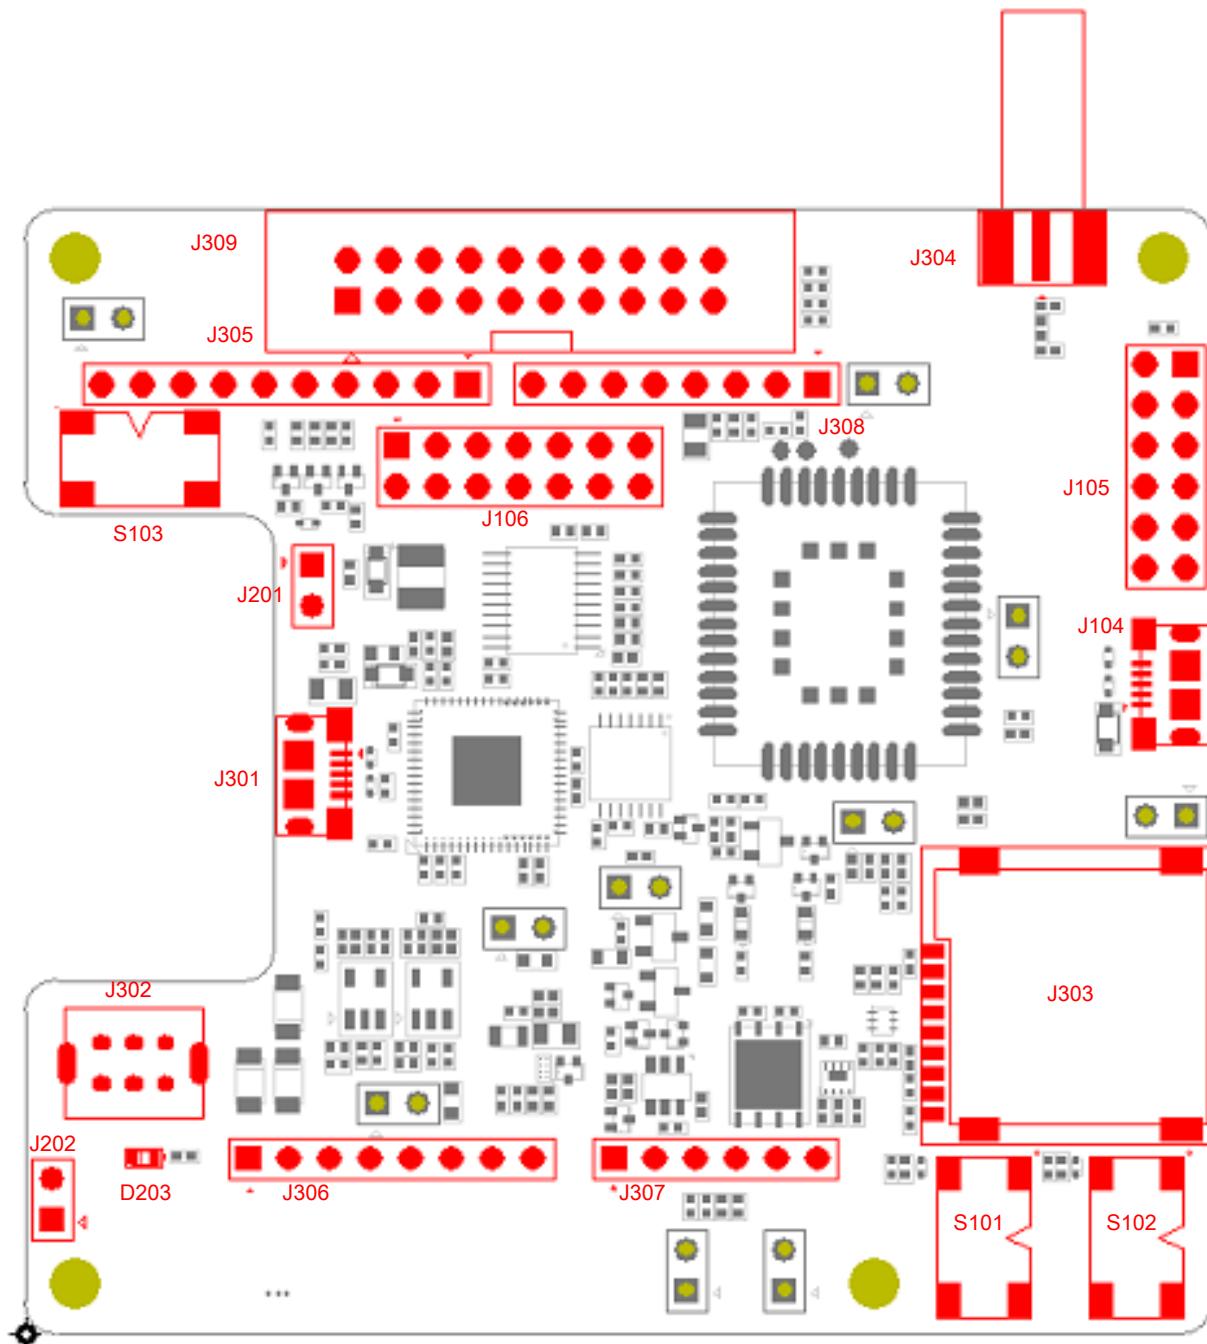


Figure 6: Interface Diagram of Using Multi Boards

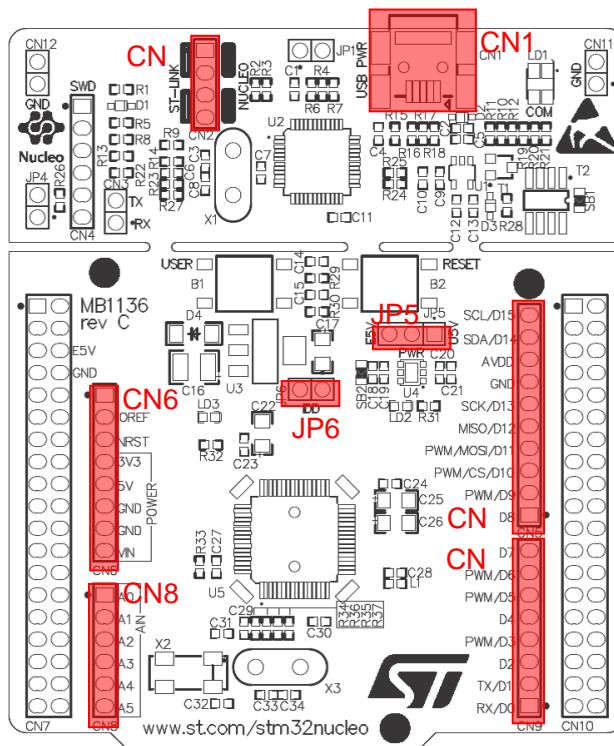


Figure 7: STM32 Nucleo-64 Board Interface Diagram (Top View)

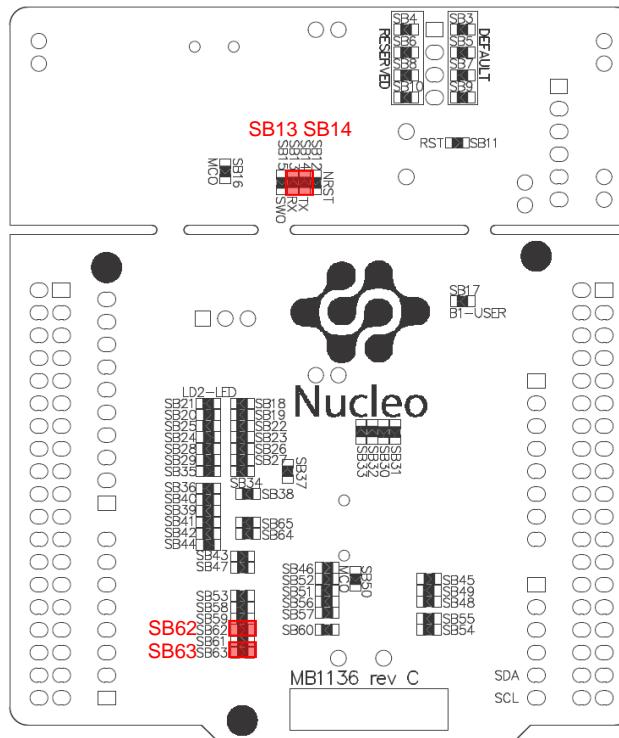


Figure 8: STM32 Nucleo-64 Board Modification Diagram (Bottom View)

### 3.2.2. Operation Procedures of Using Multi Boards

1. Install driver for STM32 Nucleo-64 board, which can be downloaded from the following URL:  
[http://www.st.com/content/st\\_com/en/products/evaluation-tools/product-evaluation-tools/mcu-eval-tools/stm32-mcu-eval-tools/stm32-mcu-nucleo/nucleo-l476rg.html](http://www.st.com/content/st_com/en/products/evaluation-tools/product-evaluation-tools/mcu-eval-tools/stm32-mcu-eval-tools/stm32-mcu-nucleo/nucleo-l476rg.html).
2. Install USB-UART driver which can be downloaded from the following URL:  
<https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers>.
3. Remove the two  $0\Omega$  resistors (SB13 and SB14) with a soldering iron, and then solder them onto SB62 and SB63 respectively.
4. Short-circuit pin 1 & 2 of CN2, pin 3 & 4 of CN2, pin 1 & 2 of JP5 and pin 1 & 2 of JP6.
5. Insert a Micro-SIM card into J303, and please note that a NB-IoT USIM card should be selected.
6. Connect the rod antenna with SMA connector on J304 (RF antenna connector).
7. Switch J302 (UART Switch) to “MAIN UART TO MCU” state.
8. Connect BC66-NA-TE-B with STM32 Nucleo-64 board via Arduino interface, and please connect J305, J306, J307 and J308 of BC66-NA-TE-B to CN5, CN6, CN8 and CN9, respectively.
9. Connect CN1 of STM32 Nucleo-64 board with PC via Mini USB cable. After powering on BC66-NA module, device information will be shown on the “Device Manager” of PC.

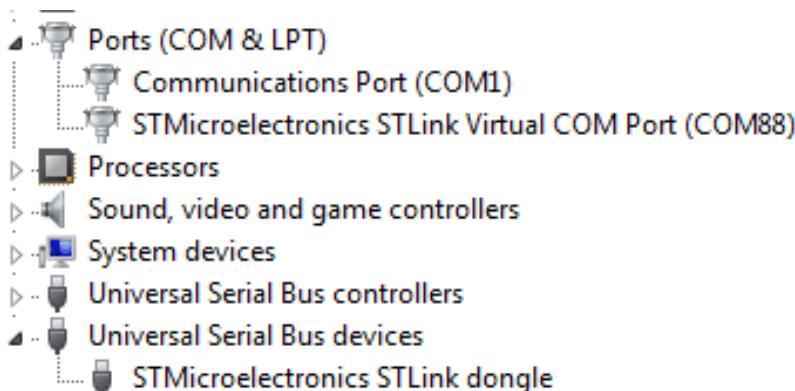


Figure 9: ST-LINK Interface Displayed on PC

### 3.2.3. Description of Pin Connection


The table below shows the pin connection between BC66-NA-TE-B and STM32-L476RG MCU, one kind of STM32 Nucleo-64 board.

Table 3: Pin Connection between BC66-NA-TE-B and STM32-L476RG MCU

No.	MCU (Morpho)	Arduino		BC66-NA-TE-B	Remark
1	PA2	D1	CN9-2	UART_MCU_TX	Main UART port RX
2	PA3	D0	CN9-1	UART_MCU_RX	Main UART port TX

4	PA7	D11	CN5-4	PSM_EINT_N	External interrupt for Deep Sleep
5	PA6	D12	CN5-5	PWRKEY_N	Active high
6	PA5	D13	CN5-6	RESET_N	Active high
7	PA0	A0	CN8-1	RI	Ring indicator
8	+5V	+5V	CN6-5	+5V	5.0V power supply
9	GND	GND	CN5-7, CN6-6, 7	GND	GND
10	+3.3V	+3.3V	CN6-4	+3.3V	3.3V power supply
11	+3.3V	IOREF	CN6-2	+3.3V	3.3V power supply

The following figure shows the pin connection between BC66-NA-TE-B and STM32-L476RG MCU.

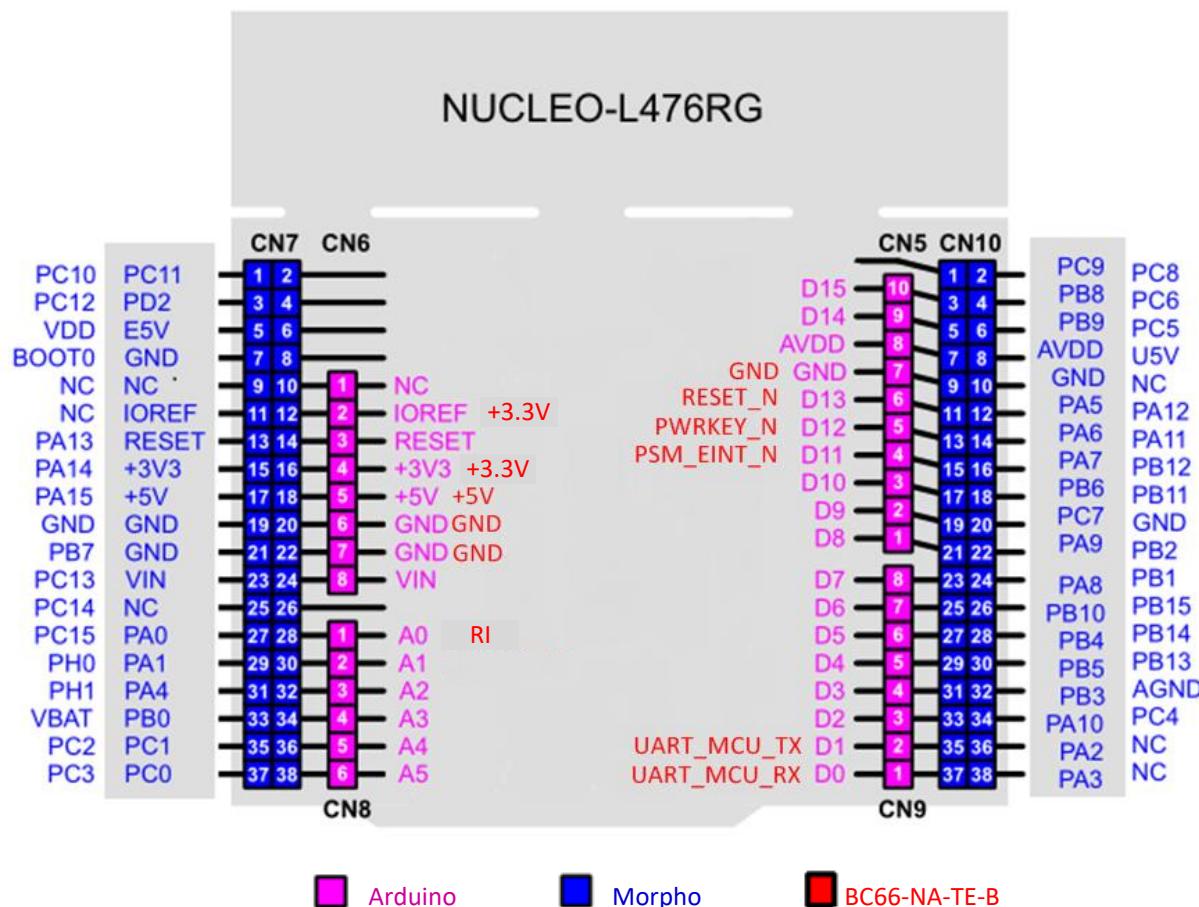

**Figure 10: Pin Connection between BC66-NA-TE-B and STM32-L476RG MCU**

# 4 Electrical and Reliability Characteristics

## 4.1. Absolute Maximum Ratings

Absolute maximum ratings for power supply and voltage on digital and analog pins of the BC66-NA module are listed in the following table.

**Table 4: Absolute Maximum Ratings**

Parameter	Min.	Max.	Unit
+5V	-0.3	6	V
VBAT	2.1	3.63	V

## 4.2. Operation and Storage Temperatures

The operation and storage temperatures of BC66-NA module are listed in the following table.

**Table 5: Operation and Storage Temperatures of BC66-NA Module**

Parameter	Min.	Typ.	Max.	Unit
Operation Temperature Range <sup>1)</sup>	-35	+25	+75	°C
Extended Temperature Range <sup>2)</sup>	-40		+85	°C
Storage Temperature Range	-40		+90	°C

**NOTES**

1. <sup>1)</sup> Within operation temperature range, the module is 3GPP compliant.
2. <sup>2)</sup> Within extended temperature range, the module remains the ability to establish and maintain functions such as SMS\*, data transmission, etc., without any unrecoverable malfunction. Radio spectrum and radio network will not be influenced, while one or more specifications, such as  $P_{out}$ , may exceed the specified tolerances of 3GPP. When the temperature returns to the normal operation temperature levels, the module will meet 3GPP specifications again.
3. “\*\*” means under development.

# 5 Mechanical Dimensions

This chapter describes the mechanical dimensions of BC66-NA-TE-B. All dimensions are measured in millimeter (mm). The tolerances for dimensions are  $\pm 0.15\text{mm}$ .

## 5.1. Mechanical Dimensions of BC66-NA-TE-B

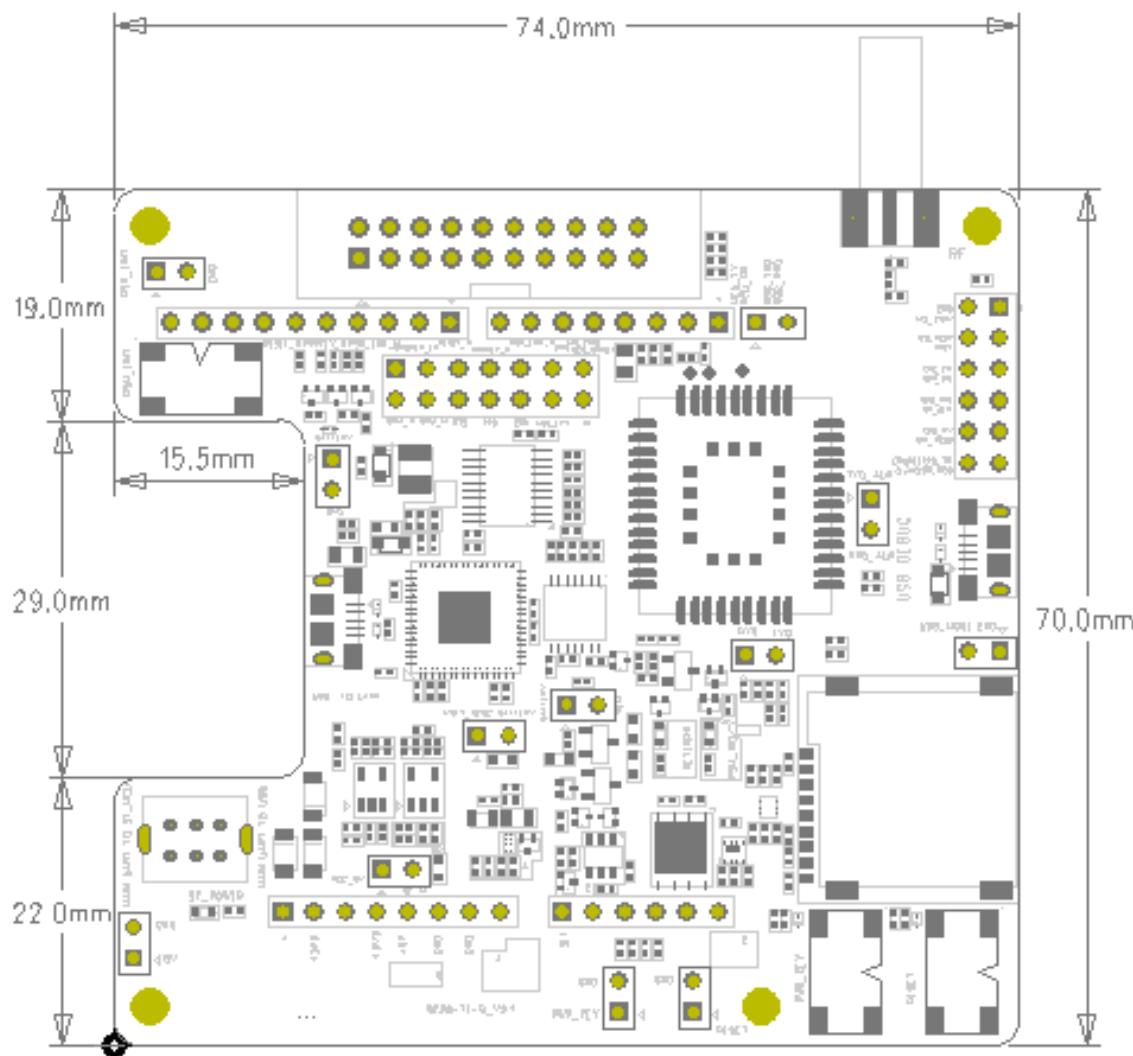


Figure 11: Dimensions of BC66-NA-TE-B (Top View)

## 5.2. Top/Bottom View of BC66-NA-TE-B

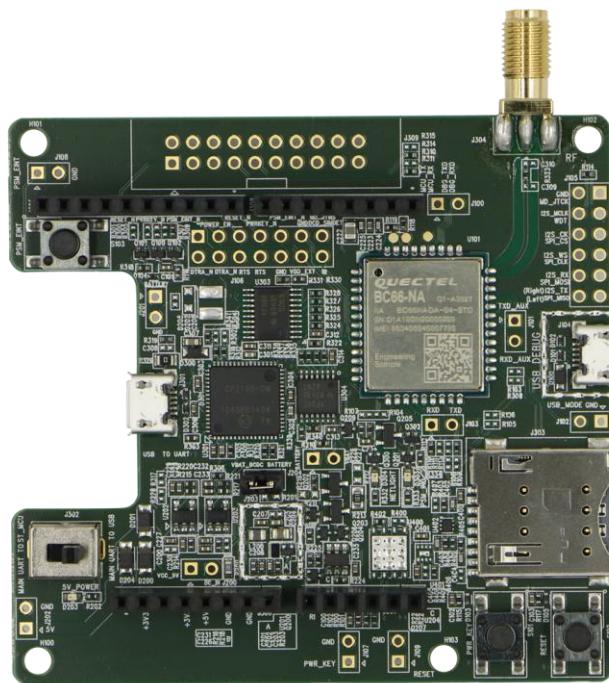


Figure 12: Top View of the BC66-NA-TE-B

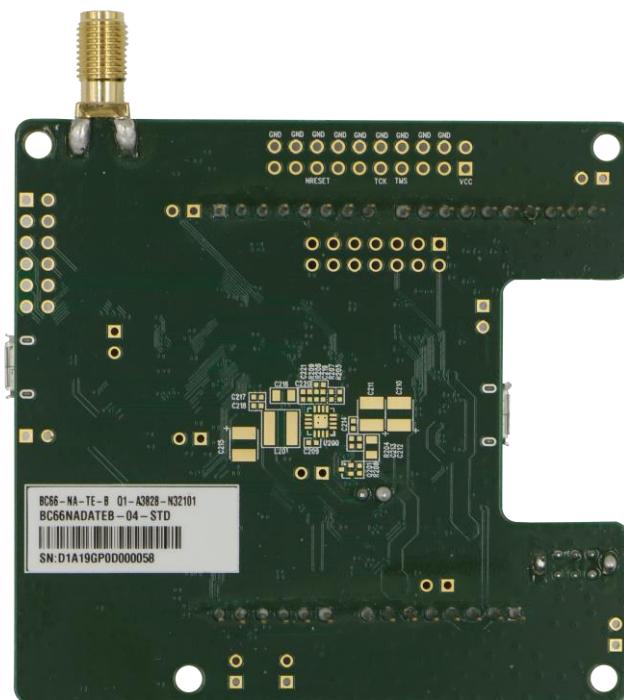


Figure 13: Bottom View of the BC66-NA-TE-B

# 6 BC66-NA-TE-B Kit and Accessories

## 6.1. BC66-NA-TE-B Kit

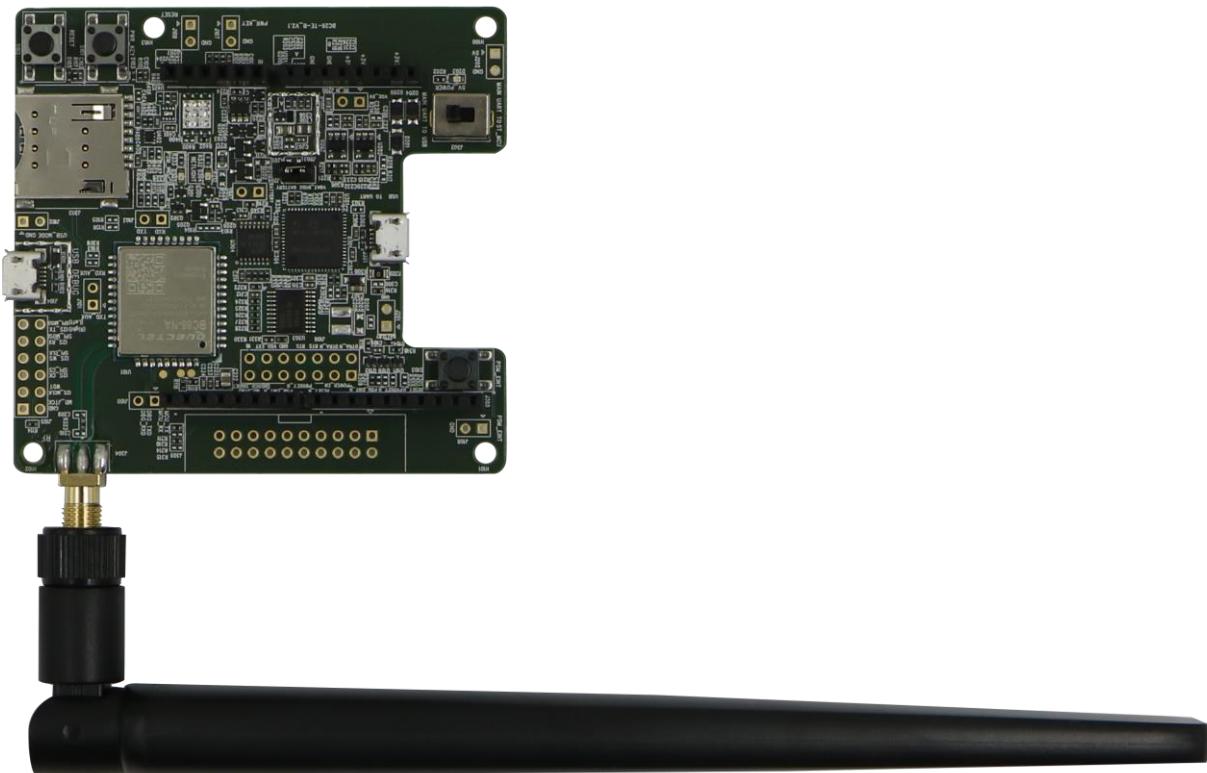


Figure 14: BC66-NA-TE-B Kit Assembly

## 6.2. BC66-NA-TE-B Kit Accessories



Figure 15: BC66-NA-TE-B and the Accessories

Table 6: Accessories List

Item	Description	Quantity
Antenna	Rod NB-IoT antenna with SMA connector	1
Cable	Micro USB cable	1
Instruction Sheet	One-page instruction about BC66-NA-TE-B connection, details of accessories, etc.	1

# 7 Appendix A References

**Table 7: Related Document**

No.	Document Name	Remark
[1]	Quectel_BC66-NA_Hardware_Design	BC66-NA hardware design

**Table 8: Terms and Abbreviations**

Abbreviation	Description
DFOTA	Delta Firmware Upgrade Over-the-air
MCU	Microcontroller Unit
NB-IoT	Narrow Band Internet of Things
SMA	SubMiniature Version A
UART	Universal Asynchronous Receiver & Transmitter
USB	Universal Serial Bus
(U)SIM	(Universal) Subscriber Identification Module