




PRODUCT SPECIFICATION

PRODUCT SPECIFICATION MOLEX LED HOLDER FOR BRIDGELUX ES ARRAY

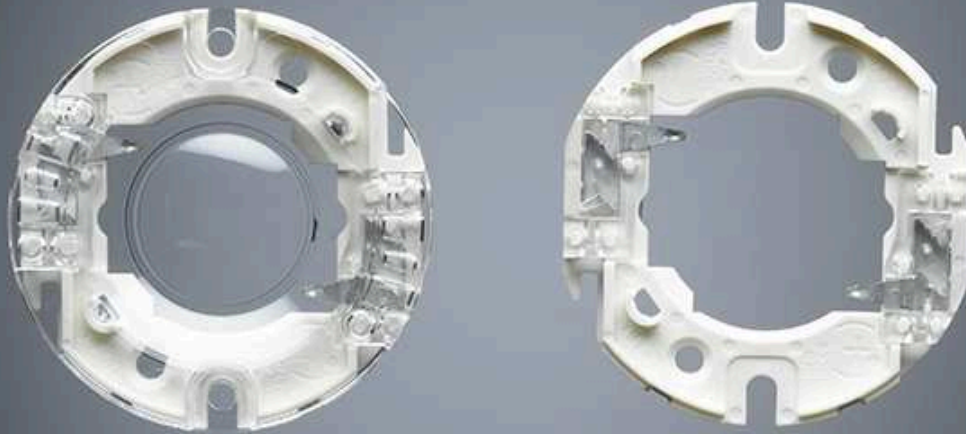

REVISION: B	ECR/ECN INFORMATION: EC No: 10564034 DATE: 2012/09/12	TITLE: PRODUCT SPECIFICATION MOLEX LED HOLDER FOR BRIDGELUX LED ARRAY	SHEET No. 1 of 7
DOCUMENT NUMBER: PS-180150-000	CREATED / REVISED BY: C. Carranza	CHECKED BY: D. Achammer	APPROVED BY: D. McGowan



PRODUCT SPECIFICATION

1.0 SCOPE

The Molex LED Holder for the Bridgelux ES Array is an electrical connector and mechanical holder to simplify installation of the Bridgelux ES Array without solder connections. The Holder is available with or without a clear cover to protect the LED Array.

2.0 PRODUCT DESCRIPTION

2.1 MOLEX LED HOLDER PART NUMBERS

This specification covers the performance requirements and test methods for the following products listed by part numbers:

- * 180150-0000 LED Holder Without Cover
- * 180150-0001 LED Holder With Cover

2.2 DIMENSIONS, MATERIALS, PLATINGS AND MARKINGS

Dimensions: See sales drawing SD-180150-000.

Material: RoHs compliant materials.

Note: Plating color variation is acceptable and does not affect performance

2.3 SAFETY AGENCY APPROVALS

UL File Number: E345583

3.0 APPLICABLE DOCUMENTS AND SPECIFICATIONS

Refer to the appropriate sales drawings, the website Molex.com and other sections of this specification for the necessary referenced documents and specifications.

3.1 SD-180150-000, Bridgelux LED Holder Sales Drawing

REVISION: B	ECR/ECN INFORMATION: EC No: 10564034 DATE: 2012/09/12	TITLE: PRODUCT SPECIFICATION MOLEX LED HOLDER FOR BRIDGELUX LED ARRAY	SHEET No. 2 of 7
DOCUMENT NUMBER: PS-180150-000	CREATED / REVISED BY: C. Carranza	CHECKED BY: D. Achammer	APPROVED BY: D. McGowan



PRODUCT SPECIFICATION

4.0 RATINGS

4.1 VOLTAGE

600 Volts DC maximum

4.2 CURRENT

2.5 Amp maximum continuous current
3.5 Amp maximum peak current (max. 10% duty cycle)

4.3 TEMPERATURE

Operating: -40°C to +85°C (Recommended), +105°C (MAX.)
Non-operating: -40°C to +105°C

4.4 DURABILITY

5 cycles mate/un-mate (wire trap interface)

5.0 QUALIFICATION

Laboratory condition and sample selection are in accordance with EIA-364-1000.

REVISION: B	ECR/ECN INFORMATION: EC No: 10564034 DATE: 2012/09/12	TITLE: PRODUCT SPECIFICATION MOLEX LED HOLDER FOR BRIDGELUX LED ARRAY	SHEET No. 3 of 7
DOCUMENT NUMBER: PS-180150-000	CREATED / REVISED BY: C. Carranza	CHECKED BY: D. Achammer	APPROVED BY: D. McGowan



PRODUCT SPECIFICATION

6.0 PERFORMANCE

6.1 MECHANICAL PERFORMANCE

ITEM	TEST CONDITION	REQUIREMENT
CLEAR COVER RETENTION	APPLY STATIC LOAD UNTIL CLEAR COVER SEPARATES FROM HOLDER	MIN. 5 N VERIFY NO DAMAGE
WIRE TRAP COVER RETENTION	APPLY STATIC LOAD UNTIL COVER SEPARATES FROM HOLDER	MIN. 20 N
WIRE RETENTION	APPLY STATIC LOAD UNTIL WIRE SEPARATES FROM HOLDER	MIN. 10 N
DROP TEST	DROP 3 TIMES (3 DIRECTIONS) FROM HEIGHT OF 1 METER ONTO CONCRETE OR EQUIVALENT SURFACE	NO DAMAGE

REVISION: B	ECR/ECN INFORMATION: EC No: 10564034 DATE: 2012/09/12	TITLE: PRODUCT SPECIFICATION MOLEX LED HOLDER FOR BRIDGELUX LED ARRAY	SHEET No. 4 of 7
DOCUMENT NUMBER: PS-180150-000	CREATED / REVISED BY: C. Carranza	CHECKED BY: D. Achammer	APPROVED BY: D. McGowan



PRODUCT SPECIFICATION

6.2 ENVIRONMENTAL PERFORMANCE

ITEM	TEST CONDITION	REQUIREMENT
TEMPERATURE LIFE (EIA-364-17)	Fasten Holder to Heatsink with LED. Insert Wires in Wire Traps. Expose 180 hours at 105°C	Max. 20 mohm Contact Resistance Change per Interface
TEMPERATURE SHOCK/CYCLIC TEMPERATURE & HUMIDITY (EIA-364-23 & 31)	Fasten Holder to Heatsink with LED. Insert Wires in Wire Traps. Expose to -55/85°C, 30 Minute Dwell, 10 Cycles Expose to Thermal Cycle 25°C/80%RH to 65°C/50%RH. 0.5 Hour Ramp, 1.0 Hour Dwell, 24 Cycles	Max. 20 mohm Contact Resistance Change per Interface
VIBRATION (EIA-364-28)	Fasten Holder to Heatsink with LED. Insert Wires in Wire Traps. Expose to Random 3.1G Vibration, 15 Minutes per Each Axis (X, Y, & Z)	Max. 20 mohm Contact Resistance Change per Interface
THERMAL CYCLING (EIA-364-1000)	Fasten Holder to Heatsink with LED. Insert Wires in Wire Traps. Expose to +15/+85°C, 30 Minute Dwell, 500 Cycles	Max. 20 mohm Contact Resistance Change per Interface
DUST EXPOSURE (EIA-364-91)	Fasten Holder to Heatsink with LED. Insert Wires in Wire Traps. Expose to Dust per EIA-364-91 Table A.1 (Benign). 1 Hr. @ 360 cfm (unmated)	Max. 20 mohm Contact Resistance Change per Interface

REVISION: B	ECR/ECN INFORMATION: EC No: 10564034 DATE: 2012/09/12	TITLE: PRODUCT SPECIFICATION MOLEX LED HOLDER FOR BRIDGELUX LED ARRAY	SHEET No. 5 of 7
DOCUMENT NUMBER: PS-180150-000	CREATED / REVISED BY: C. Carranza	CHECKED BY: D. Achammer	APPROVED BY: D. McGowan




PRODUCT SPECIFICATION


7.0 TEST SEQUENCE

7.1 Reliability Test Sequences:


Temperature Life

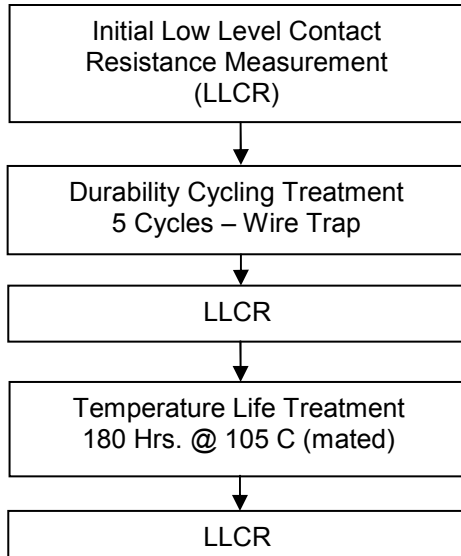

Thermal Cycling

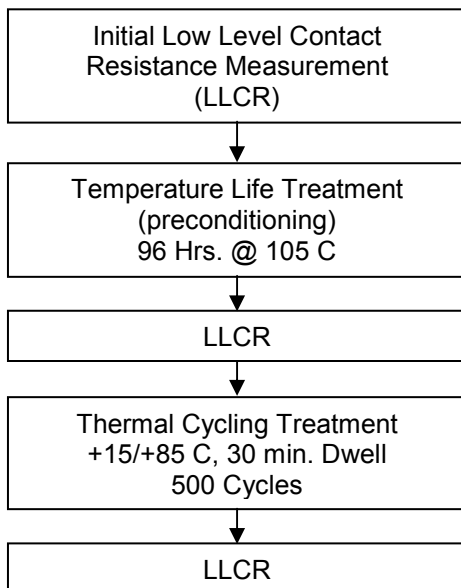

Temperature Shock/Cyclic Temperature & Humidity

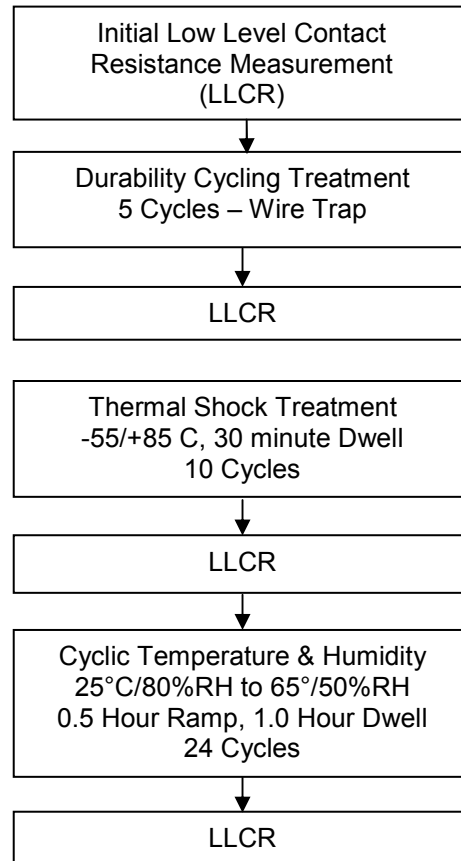


REVISION: B	ECR/ECN INFORMATION: EC No: 10564034 DATE: 2012/09/12	TITLE: PRODUCT SPECIFICATION MOLEX LED HOLDER FOR BRIDGELUX LED ARRAY	SHEET No. 6 of 7
DOCUMENT NUMBER: PS-180150-000	CREATED / REVISED BY: C. Carranza	CHECKED BY: D. Achammer	APPROVED BY: D. McGowan




PRODUCT SPECIFICATION

7.1 Reliability Test Sequences (continued):

Vibration

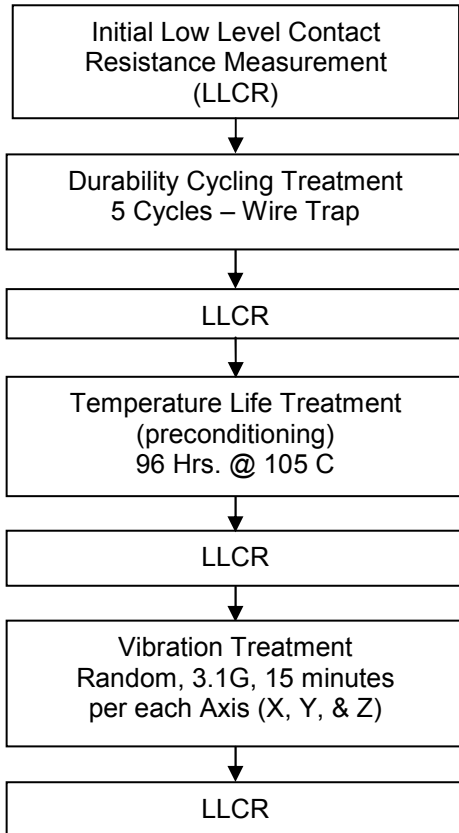

Dust Exposure

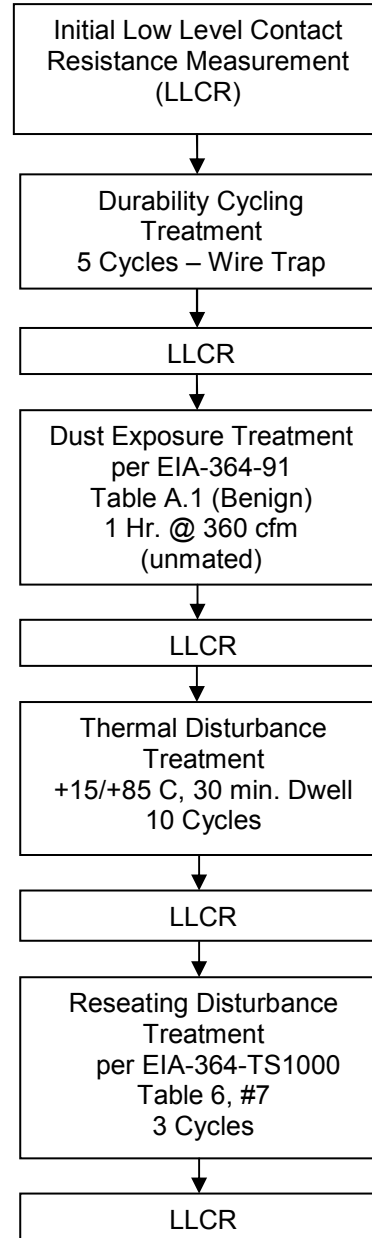

REVISION: B	ECR/ECN INFORMATION: EC No: 10564034 DATE: 2012/09/12	TITLE: PRODUCT SPECIFICATION MOLEX LED HOLDER FOR BRIDGELUX LED ARRAY	SHEET No. 7 of 7
DOCUMENT NUMBER: PS-180150-000	CREATED / REVISED BY: C. Carranza	CHECKED BY: D. Achammer	APPROVED BY: D. McGowan